
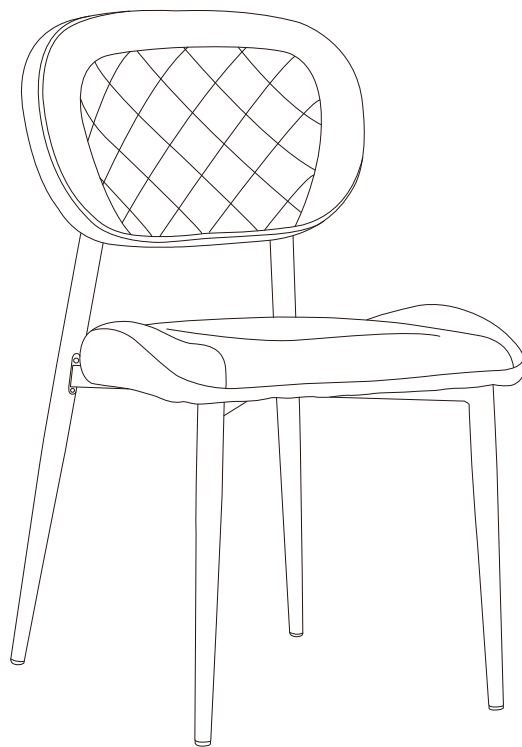







VECHOO


Dining Chair Ramona




PARTS

A		x 1	E		x 1	I		x 4
B		x 1	F		x 4	J		x 7
C		x 1	G		x 2	K		x 1
D		x 1	H		x 1			
				M6*16			M6*50	
				M6*25				
				M6*30				


STEP 1

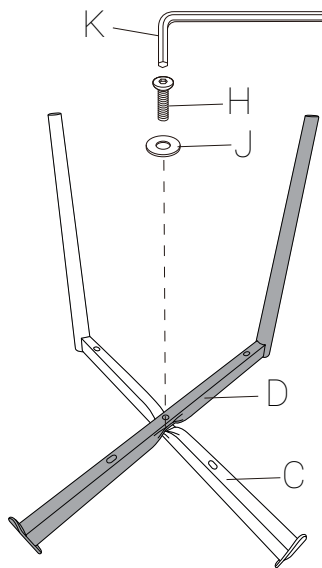


STEP 2

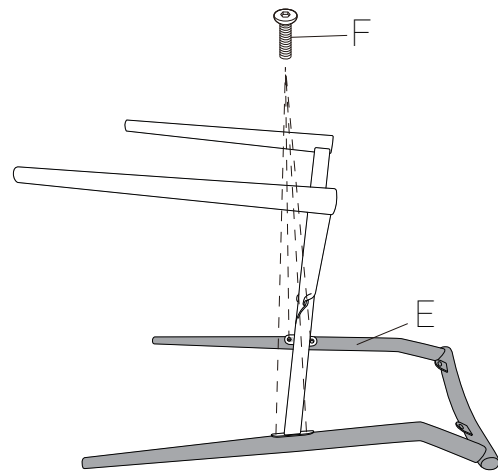

STEP 3

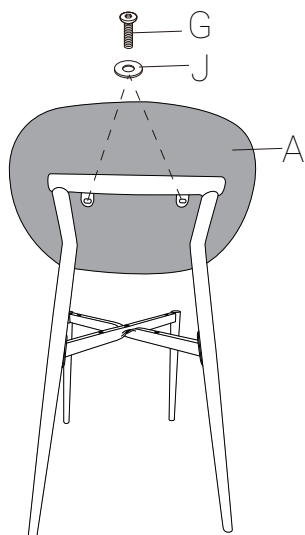

STEP 4

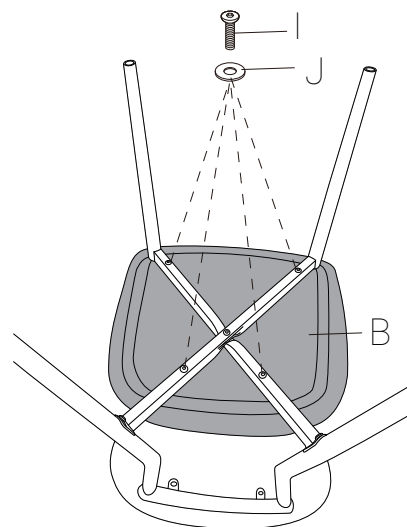

 Please do not tighten the screws until they are placed in the holes.